

Phoenix Connector and 12V AC Adapter Assembly Instructions


1 TOOLS

1. 12V AC-DC Adapter
2. Wire Stripper
3. Flat Head Screw Driver




2 STRIPPING THE WIRES

Cut and Strip the main insulation taking care not to cut the cores' insulation. After that, continue to strip the white wire (DC 12V) and twist the rest of the conductor (GND). Tin both after that with solder is a plus.

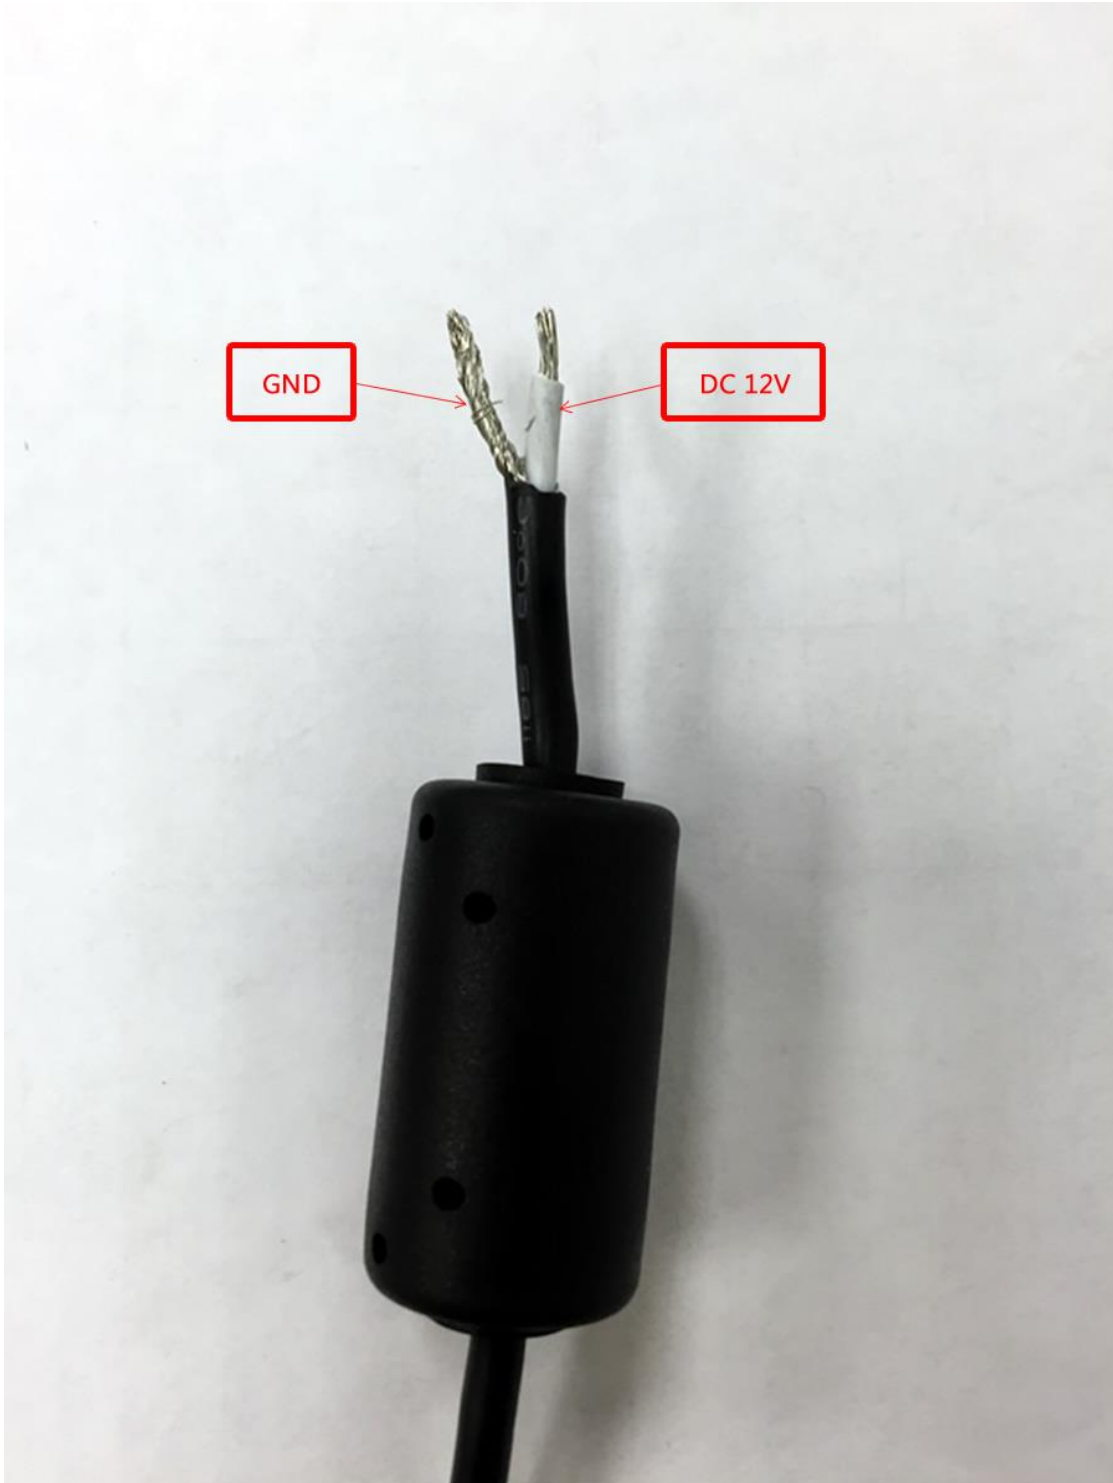

3 CONNECTING THE 2-PIN PHOENIX CONNECTOR

Unscrew the screws on top of the 2-pin Phoenix Connector and insert the wires into the Phoenix Connector as shown (Wires must be inserted in the correct position). Screw the screws back down to tighten the wire.

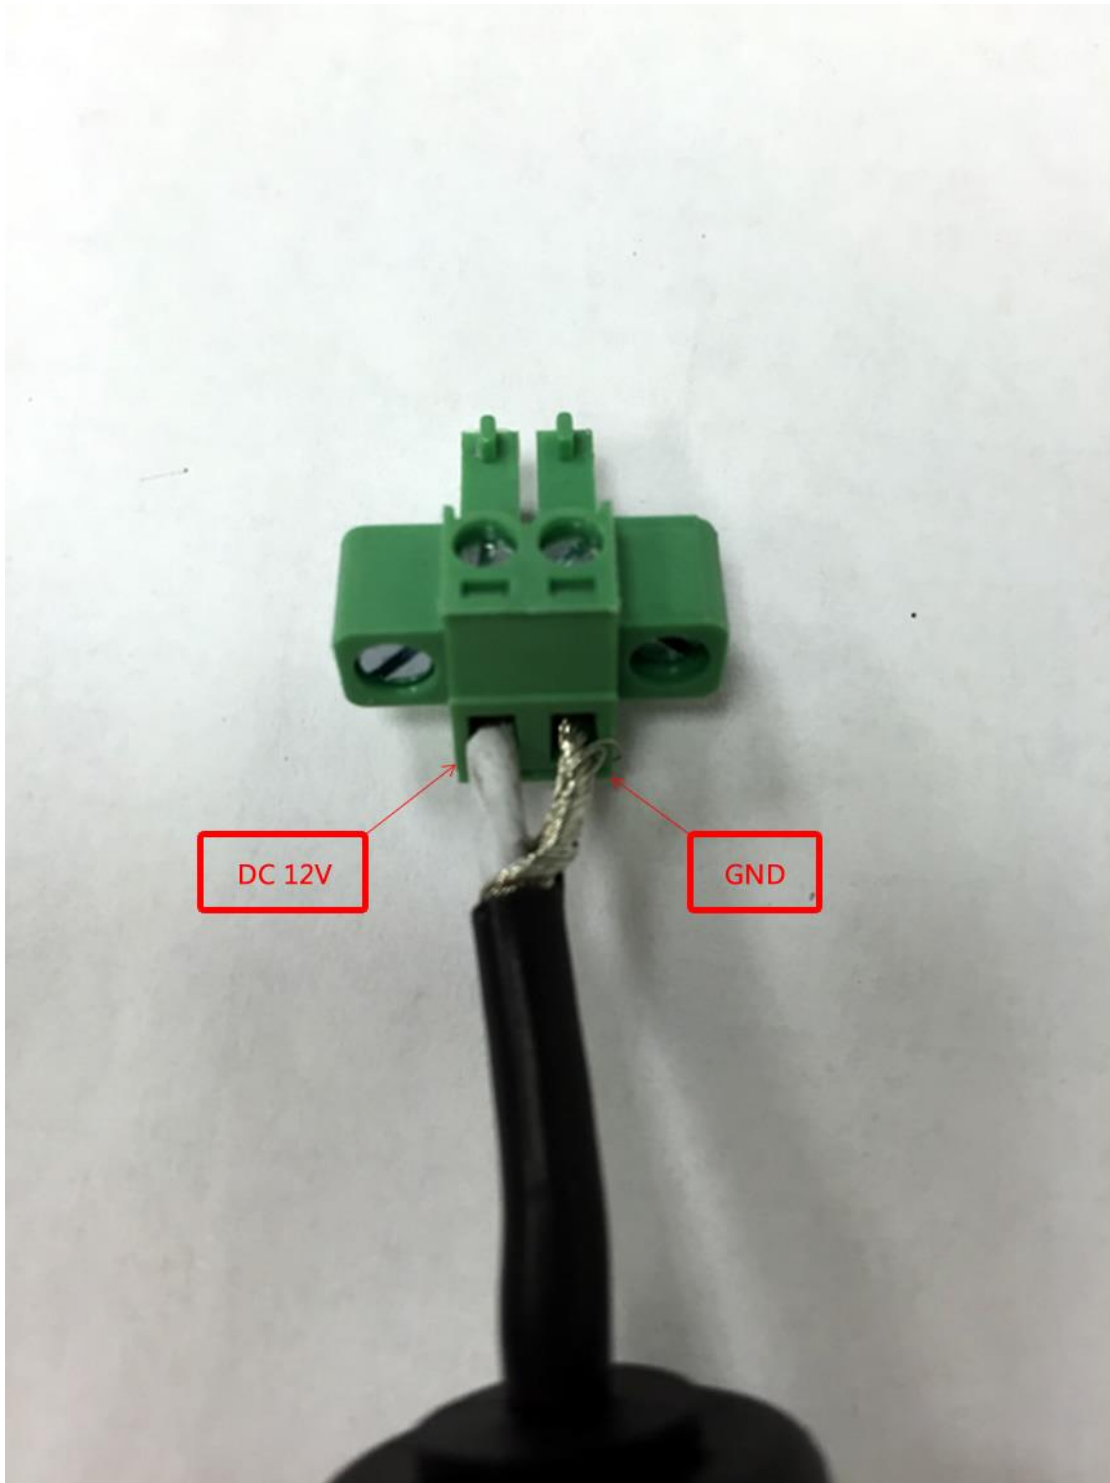

4 FINAL FINISH

Plug and screw the Phoenix Connector onto the barebone in the correct position as shown.

